

AUTOSLIDE

USER'S MANUAL WIRELESS TOUCH BUTTON SWITCH




Safety Instruction



Thank you for purchasing Autoslide Wireless Push Button. Please refer to the following operation sheet before usage.

Product Overview

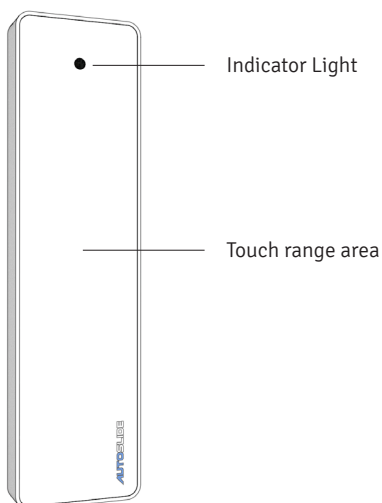

Wall mount options

Option 1




Option 2



1. Undo the screw at the bottom of the switch.
2. Use 2 wall screws to fix the switch to the wall.

Or use double side self-adhesive tape.

How to connect to Autoslide Controller

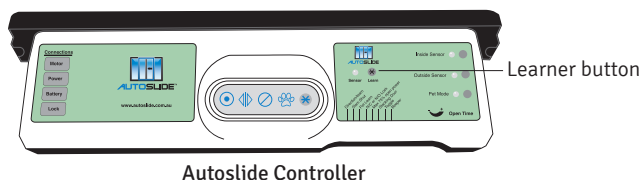

Autoslide Controller



1. Press the learn button on the Autoslide Controller.

2. Press the touch button, when the indicator light flashes red, the switch is connected.

The touch button now is connected to the controller and ready to activate the door.

Technical Specifications

Rated voltage	3VDC (2x lithium coin batteries in parallel)
Rated current	Average 13uA
IP protection class	IP30
Product Maximum frequency	16MHz
RF transmitter specifications	
RF Frequency	433.92MHz
Type of modulation	ASK/OOK
Type of encoding	Pulse width modulation
Transmission bit rate	830 bit/sec
Transmission protocol	Keeloq
Length of transmitted packet	66 bits
Period of re-transmission when activated	Not re-transmitted until released
Transmitting power	<10dBm (nom 7dBm)

Features

- Wireless touch button, no wiring required.
- Entire activation area, soft touch to activate the door.
- 2.4G wireless communication technology, stable frequency.
- Transmitter uses Low power transmission technology. It has long-range and low power consumption.
- Easy to connect with Autoslide operator.
- LED light indicates the switch is active.

Channel Selection

Autoslide Wireless Touch Button has two-channel selections, Master or Slave.

The onboard switch selects the preferred channel.

