



Notes:
Always connect the Battery first.
Fuse Ratings depend on your configuration